



Outdoor
Living Today

ASSEMBLY MANUAL

Garden in a Box - 16 Foot Side Lattice Option

Stock Code:

RBLO16

Version #1.1

April 17, 2025


Thank you for purchasing
an 16ft Lattice Option for
your Garden In A Box.
Please take the time to
identify all the parts prior
to assembly.

Safety Points and Other Considerations

Please follow this instruction
manual when assembling your
Lattice Option and retain the
manual for future maintenance
purposes.

Please use Safety Eyewear and
Gloves while Assembling. Be
sure to read and follow all
operating instructions for any
tools used during assembly.
Remember - NO SAW CUTTING
IS REQUIRED!

**Estimated Assembly Time for
the Lattice Option = 1 Hour.**

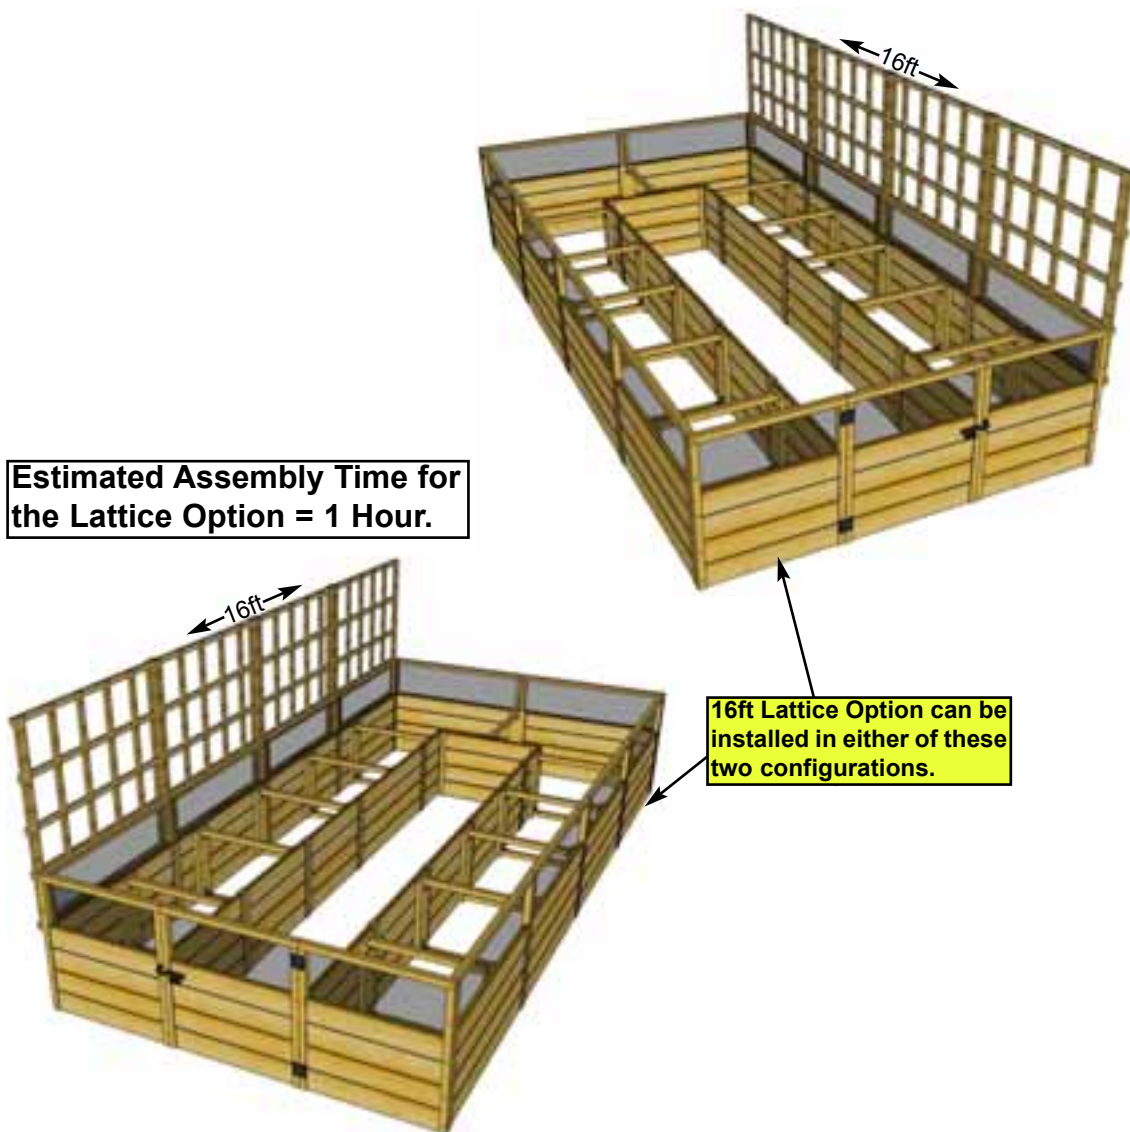

CONTACT

ADDRESS

9393 287th Street,
Maple Ridge, British Columbia,
Canada V2W 1L1

PHONE & FAX

Toll Free: 1-888-658-1658


Fax:

ONLINE

Email: olmsupport@outdoorlivingtoday.com

Web: www.outdoorlivingtoday.com

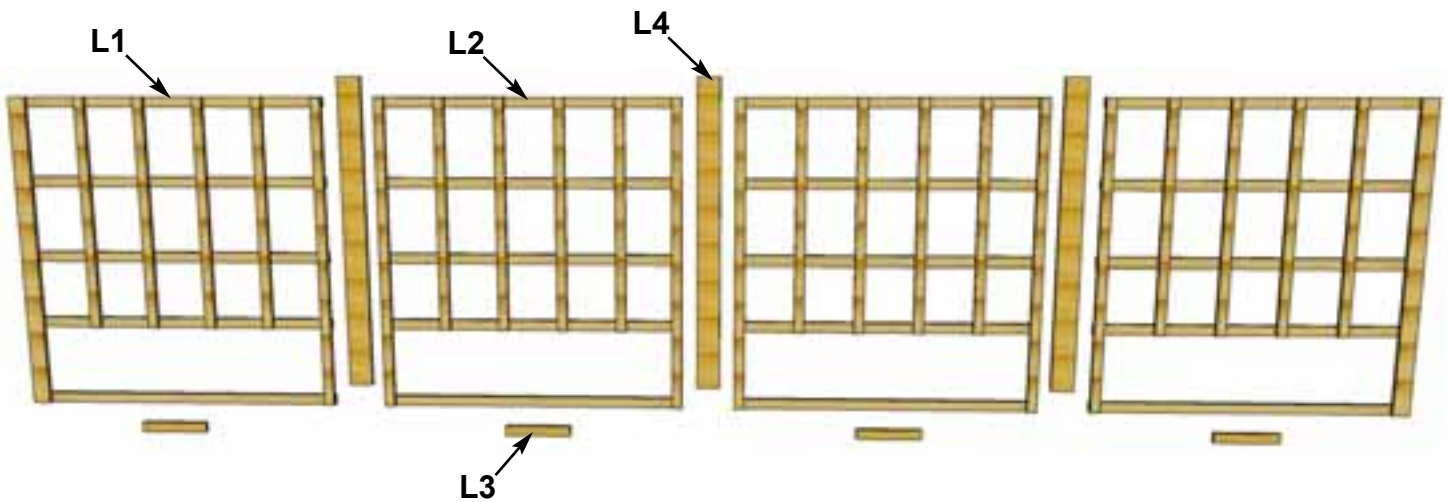


Exploded View & Parts List for 16ft Lattice Option



Parts List

- Part L1** 2 - Side Lattice Panels
47 1/2" wide x 47" high
- Part L2** 2 - Center Lattice Panels
46" wide x 47" high
- Part L3** 4 - Horizontal Cleats
3/4" x 1 1/2" x 10"
- Part L4** 3 - Vertical Braces
3/4" x 3 1/2" x 47"

Hardware Kit (Provided)

- S1 - 2 1/2"  x 10 Pcs.
- S3 - 2"  x 44 Pcs.
- BR1 - Square Drive Bit x 1 Pc. 

Tools Required (Not Provided)



Screw Gun/Drill



Tape Measure



1/8" Drill Bit

Safety Equipment Required

(Not Provided)




Safety Glasses




Work Gloves

In the event of a missing or broken piece, simply call the Outdoor Living Today Customer Support Line @ 1-888-658-1658 within 30 days of the delivery of your purchase. It is our commitment to you to courier replacement parts, free of charge, within 10 business days of this notification. Replacement parts will not be provided free of charge after the 30 day grace period.

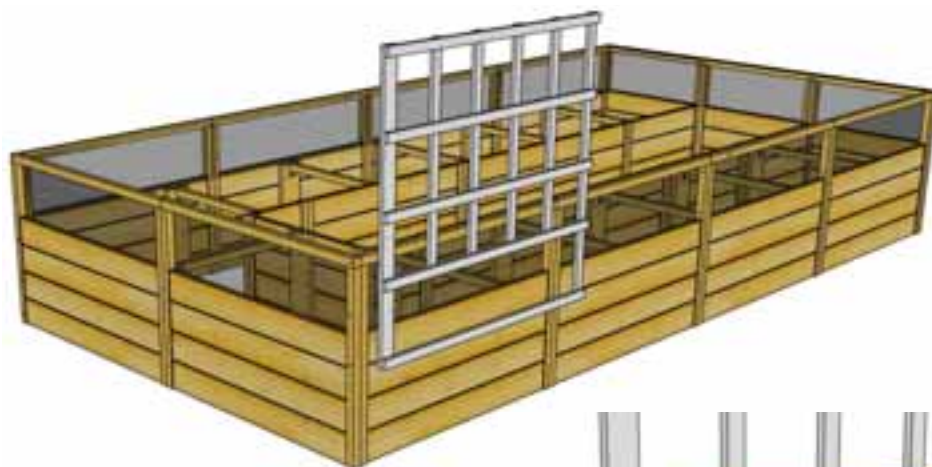

Top of Lattice rib flush with top of Garden Bed.

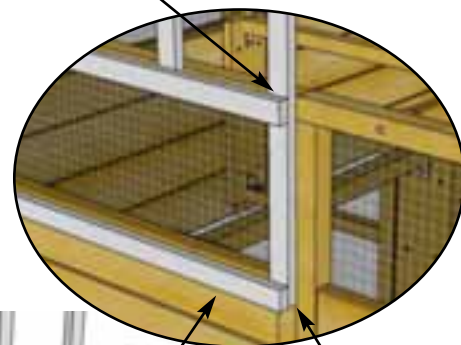

Flush with seam between Garden Bed panels.



1. Orientate a **Side Lattice Panel** onto an outermost side panel of your Garden Bed. The sides of the Lattice Panels will be aligned with the seams between Garden Bed panels. Position vertically as shown and attach with **6 - 2" Screws**.

Parts

L1 - Side Lattice Panel
(47 1/2" x 47") x 1

Hardware

S3 - 2" Screws x 6 total

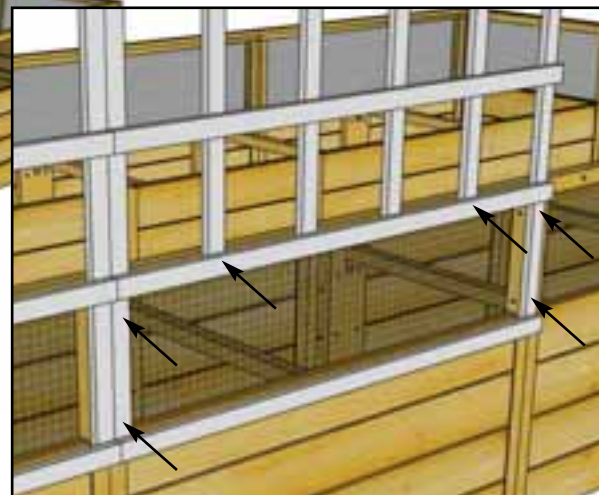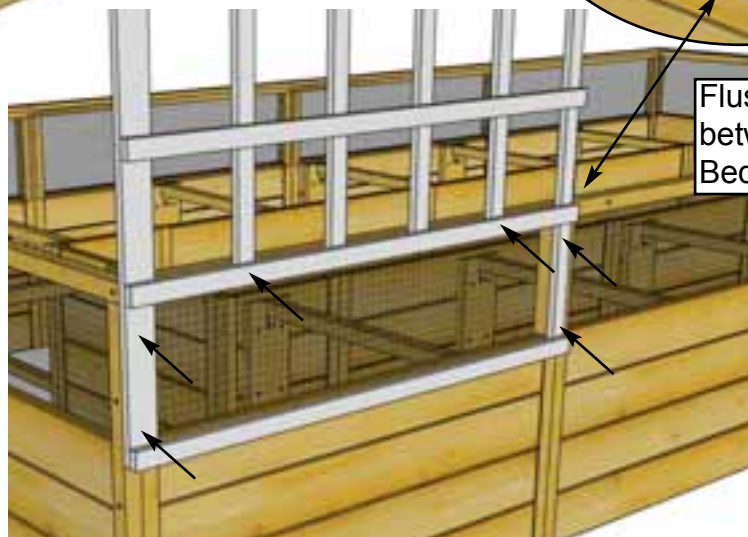


2. Align a **Center Lattice Panel** onto next panel of your Garden Bed as per **Step 1** and attach with **6 - 2" Screws**.

Parts

L2 - Center Lattice Panel
(46" x 47") x 1

Hardware



S3 - 2" Screws x 6 total

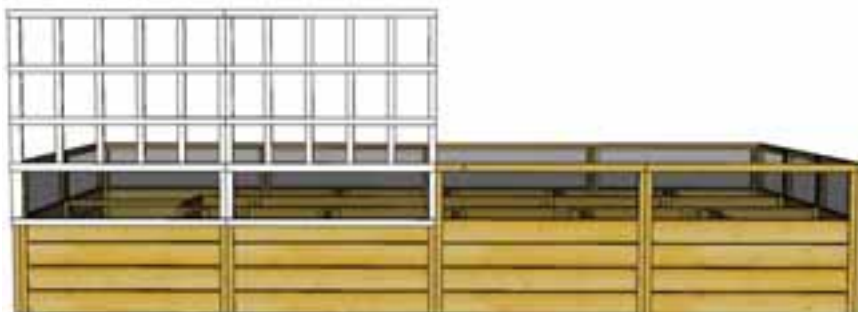




3. Align remaining **Center Lattice Panel** and **Side Lattice Panel** onto your Garden Bed as per **Steps 1 - 2** and attach with **6 - 2" Screws** per panel.



Parts	Hardware
L1 - Side Lattice Panel (47 1/2" x 47") x 1	S3 - 2" Screws x 12 total
L2 - Center Lattice Panel (46" x 47") x 1	

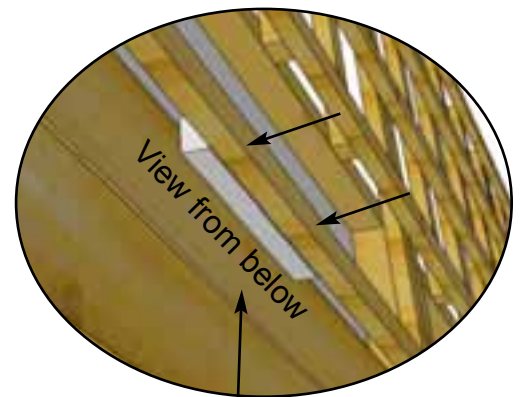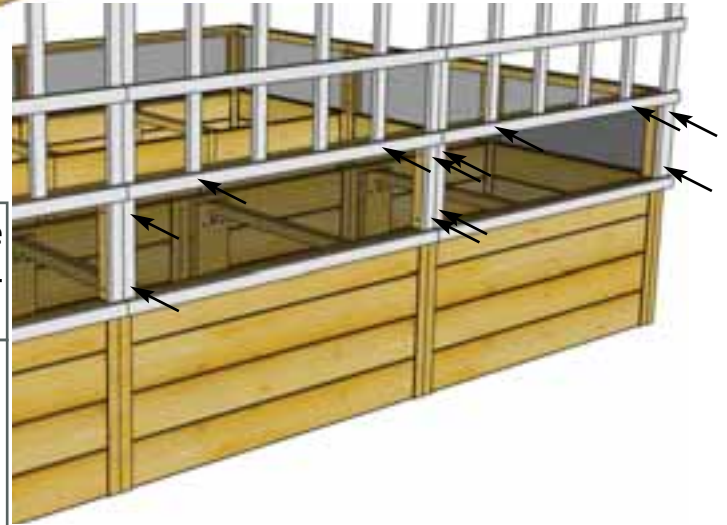

4. Fit a **Horizontal Cleat** between the Lattice Panel and Garden Bed panel, centered just below the screen. Attach with **2 - 2 1/2" Screws**.

Parts (Steps 4 - 5)
L3 - Horizontal Cleats (3/4" x 1 1/2" x 10") x 4
Hardware (Steps 4 - 5)
S1 - 2 1/2" Screws x 8 total

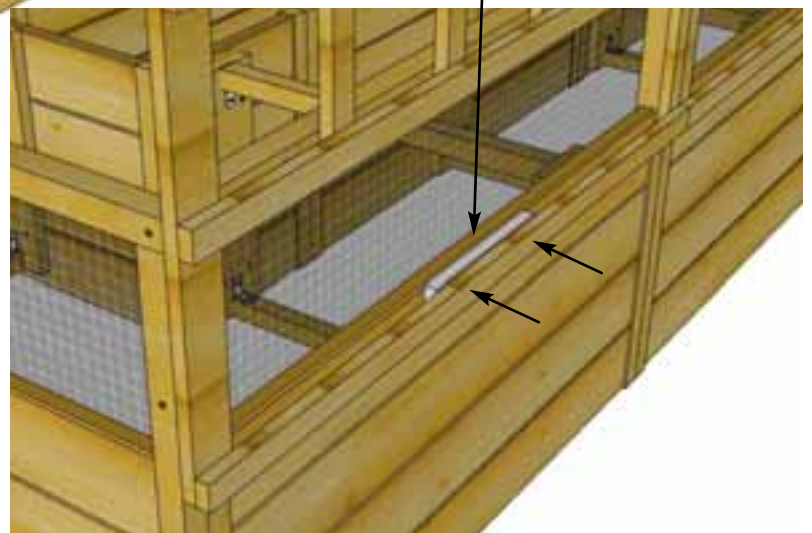

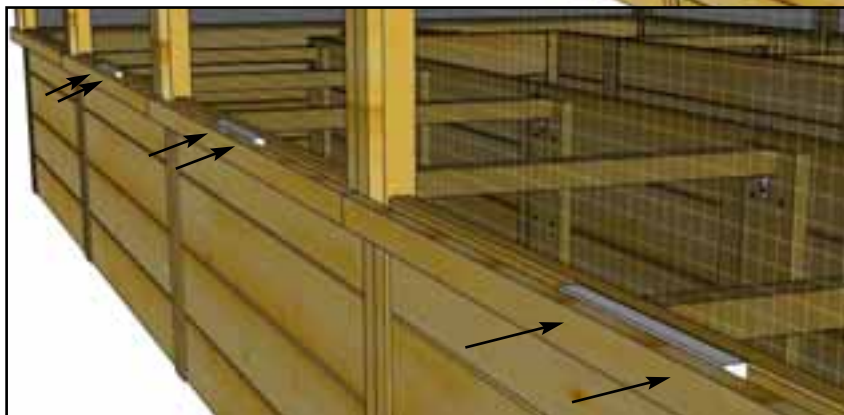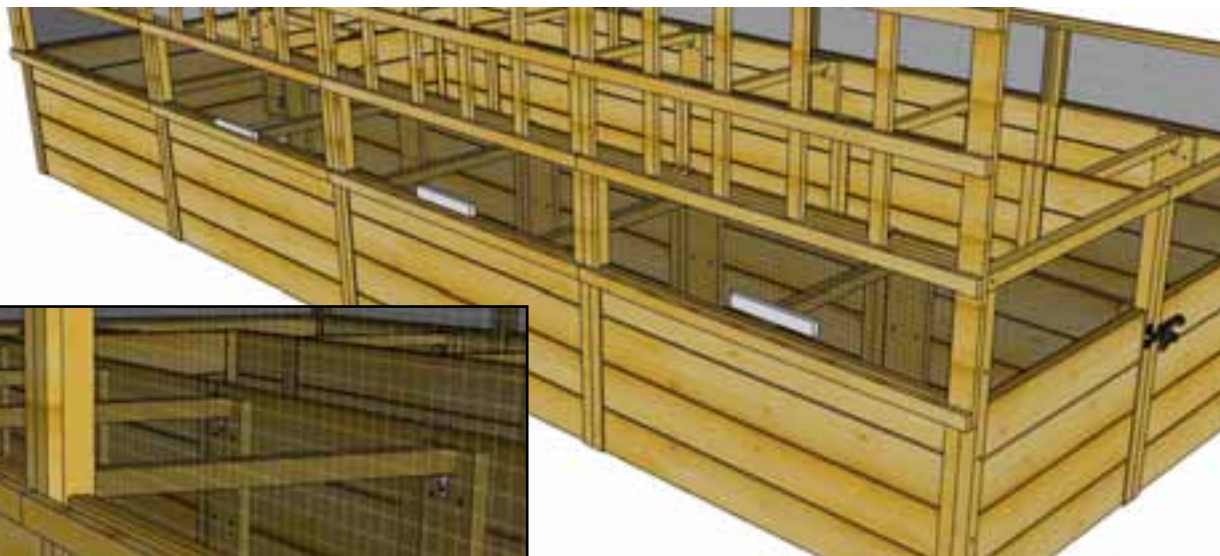

5. Position and attach remaining Horizontal Cleats as per Step 4.


6. Position **Vertical Braces** centered over seams between Lattice Panels. Attach with **5 - 2" Screws** per Brace, ensuring screws go through the intersecting sections of the Lattice crosshatch. Stagger screws side-to-side on Brace so Lattice Panels are secured together.

Parts


L4 - Vertical Braces
(3/4" x 3 1/2" x 47") x 3

Hardware

S3 - 2" Screws x 15 total

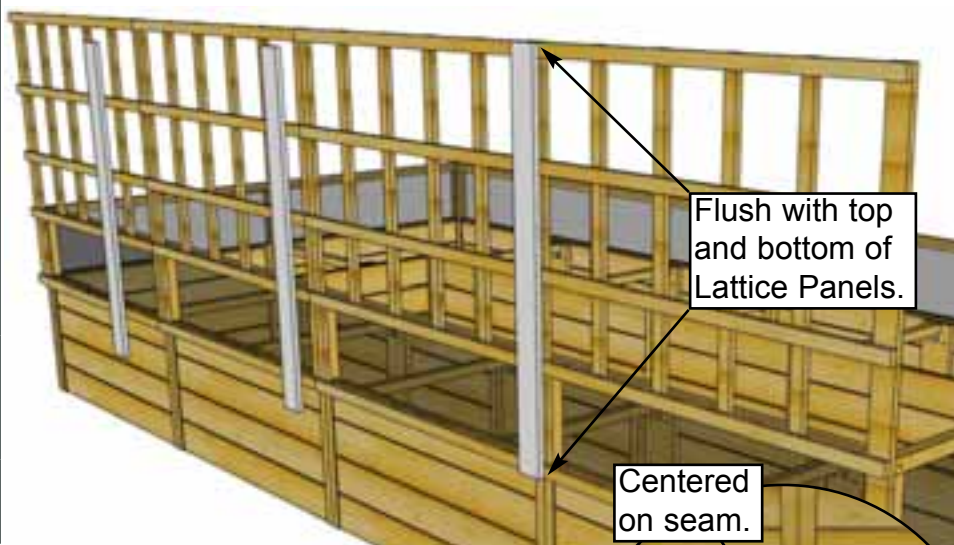

Flush with top and bottom of Lattice Panels.

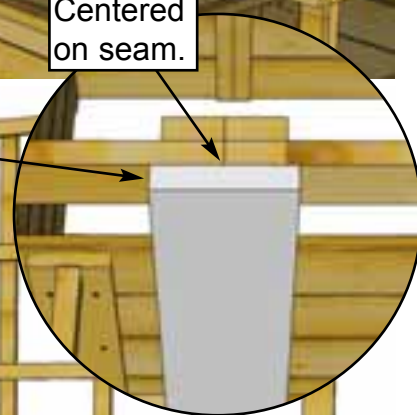



Outdoor
Living Today

Congratulations
on assembling
your 16ft Lattice
Option for your
Garden in a Box!



We hope your experience constructing our **16ft Lattice Option** has been both positive and rewarding. We value your feedback and would like to hear back from you on how well we are doing in the following areas:

- 1. Customer Service**
- 2. On Time Shipping**
- 3. Motor Freight Delivery**
- 4. Quality of Materials**
- 5. Assembly Manual**
- 6. Overall Satisfaction**



The materials contained in this Assembly Manual may be downloaded or copied provided that ALL copies retain the copyright and any other proprietary notices contained on the materials. No material may be modified, edited or taken out of context such that its use creates a false or misleading statement or impression as to the positions, statements or actions.

Please call, write or email us at:

Canadian Address
9393 287th Street
Maple Ridge, British Columbia
Canada V2W 1L1

United States Address
P.O. Box 96
Sumas, Washington
USA 98295