



# Lattice Option for Garden in a Box - 16 Foot Side Assembly Manual

Revision #1.0  
September 14, 2021

Thank you for purchasing a 16ft Lattice Option for your Garden In A Box. Please take the time to identify all the parts prior to assembly.



### Safety Points and Other Considerations

Please follow this instruction manual when assembling your Lattice Option and retain the manual for future maintenance purposes.

Please use Safety Eyewear and Gloves while Assembling. Be sure to read and follow all operating instructions for any tools used during assembly.

Remember - NO SAW CUTTING IS REQUIRED!


**Estimated Assembly Time for the Lattice Option = 1 Hour.**

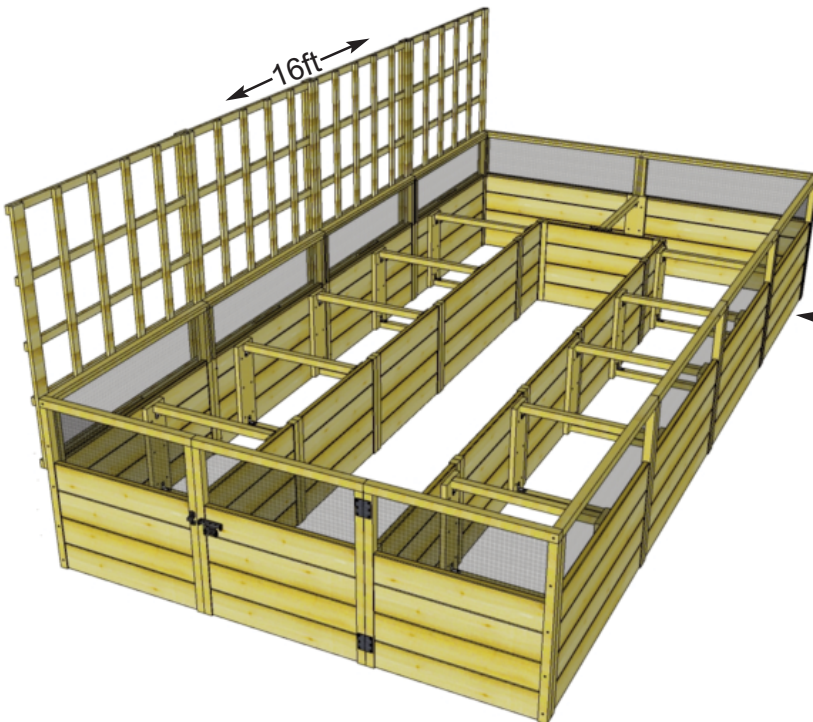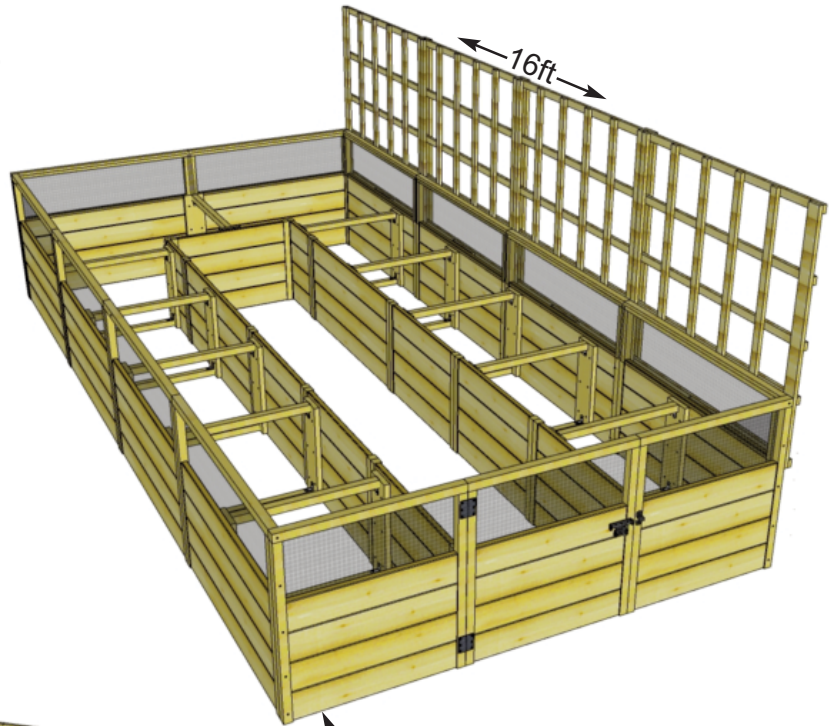

**16ft Lattice Option can be installed in either of these two configurations.**

**In the event of a missing or broken piece, simply call the Outdoor Living Today Customer Support Line @ 1-888-658-1658 within 30 days of the delivery of your purchase. It is our commitment to you to courier replacement parts, free of charge, within 10 business days of this notification. Replacement parts will not be provided free of charge after the 30 day grace period.**

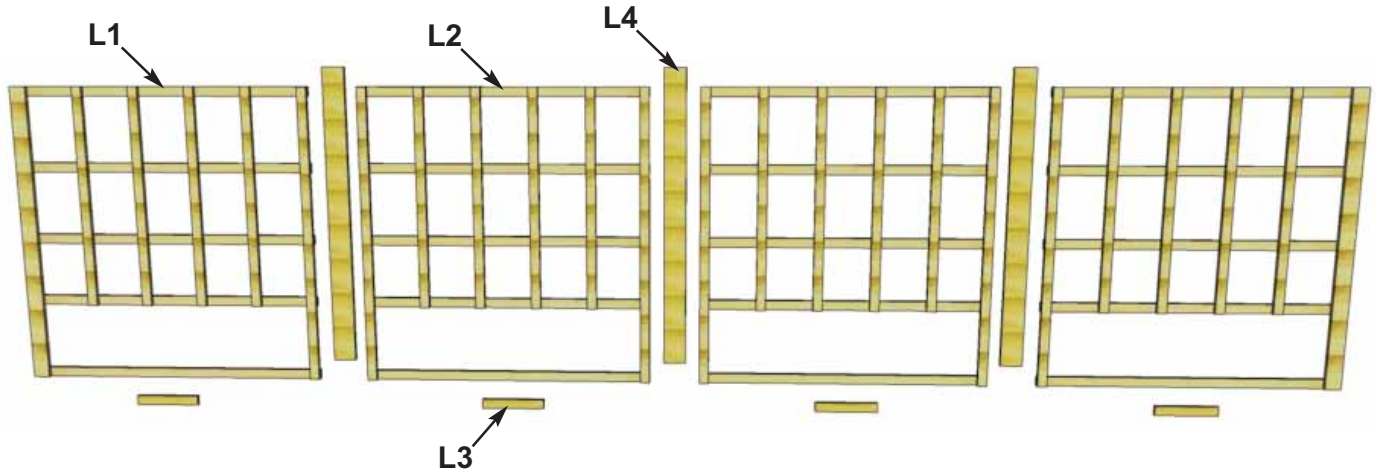


## Exploded View & Parts List for 16ft Lattice Option



### Parts List

- Part L1** 2 - Side Lattice Panels  
47 1/2" wide x 47" high
- Part L2** 2 - Center Lattice Panels  
46" wide x 47" high
- Part L3** 4 - Horizontal Cleats  
3/4" x 1 1/2" x 10"
- Part L4** 3 - Vertical Braces  
3/4" x 3 1/2" x 47"

### Hardware Kit (Provided)

- S1 - 2 1/2"  x 10 Pcs.
- S3 - 2"  x 44 Pcs.
-   
BR1 - Square Drive Bit x 1 Pc.

### Tools Required (Not Provided)



Screw Gun/Drill



Tape Measure



1/8" Drill Bit

### Safety Equipment Required

(Not Provided)




Safety Glasses




Work Gloves



Top of Lattice rib flush with top of Garden Bed.


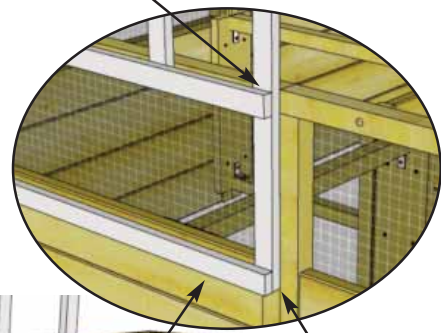


Flush with seam between Garden Bed panels.

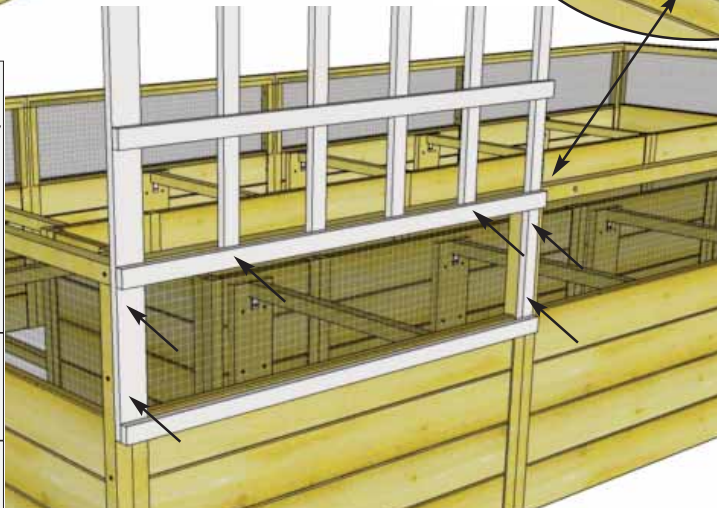


**1.** Orientate a **Side Lattice Panel** onto an outermost side panel of your Garden Bed. The sides of the Lattice Panels will be aligned with the seams between Garden Bed panels. Position vertically as shown and attach with **6 - 2" Screws**.

<u>Parts</u>	
<b>L1 - Side Lattice Panel</b> (47 1/2" x 47") x 1	
<u>Hardware</u>	
<b>S3 - 2" Screws</b> x 6 total	

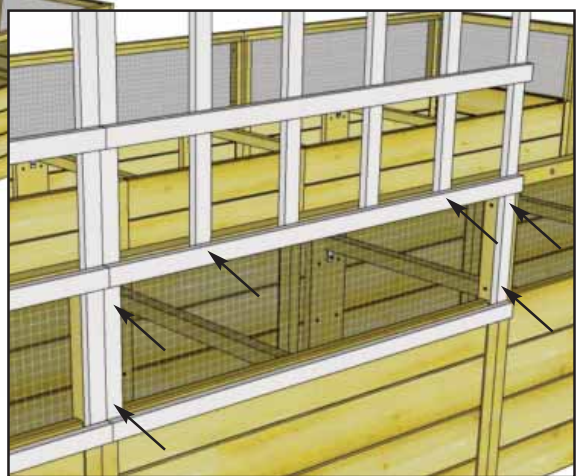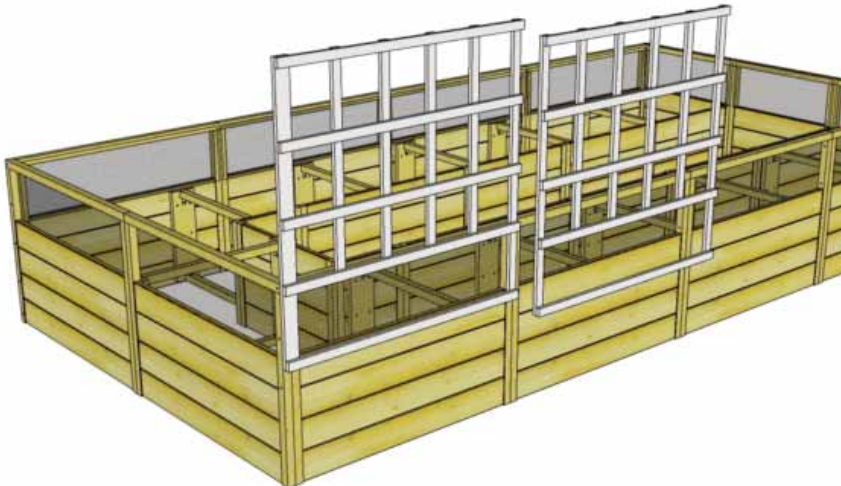


**2.** Align a **Center Lattice Panel** onto next panel of your Garden Bed as per **Step 1** and attach with **6 - 2" Screws**.

<u>Parts</u>	<u>Hardware</u>
<b>L2 - Center Lattice Panel</b> (46" x 47") x 1	<b>S3 - 2" Screws</b> x 6 total



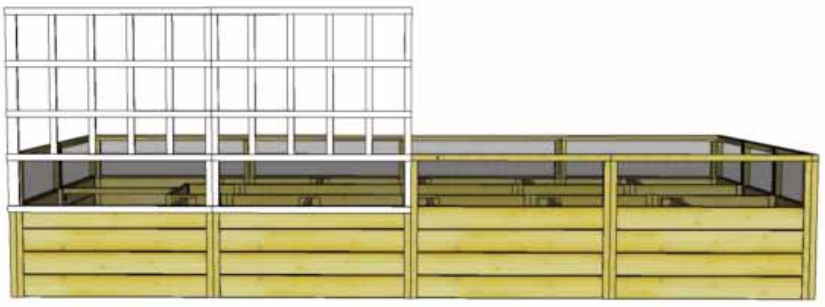




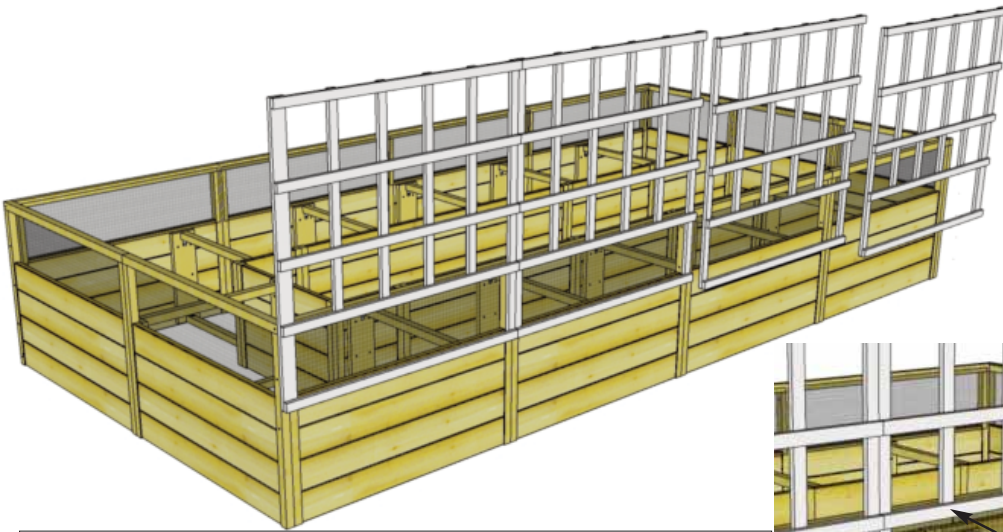


**3.** Align remaining **Center Lattice Panel** and **Side Lattice Panel** onto your Garden Bed as per **Steps 1 - 2** and attach with **6 - 2" Screws** per panel.

Parts	Hardware
<b>L1 - Side Lattice Panel</b> (47 1/2" x 47") x 1	<b>S3 - 2" Screws</b> x 12 total
<b>L2 - Center Lattice Panel</b> (46" x 47") x 1	

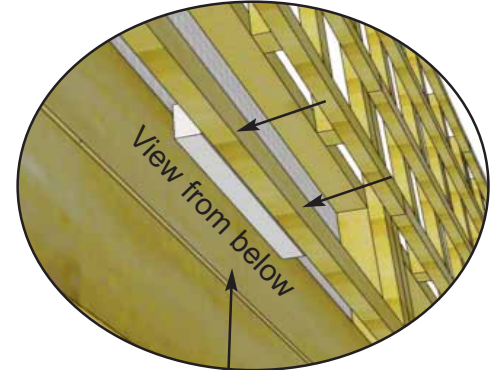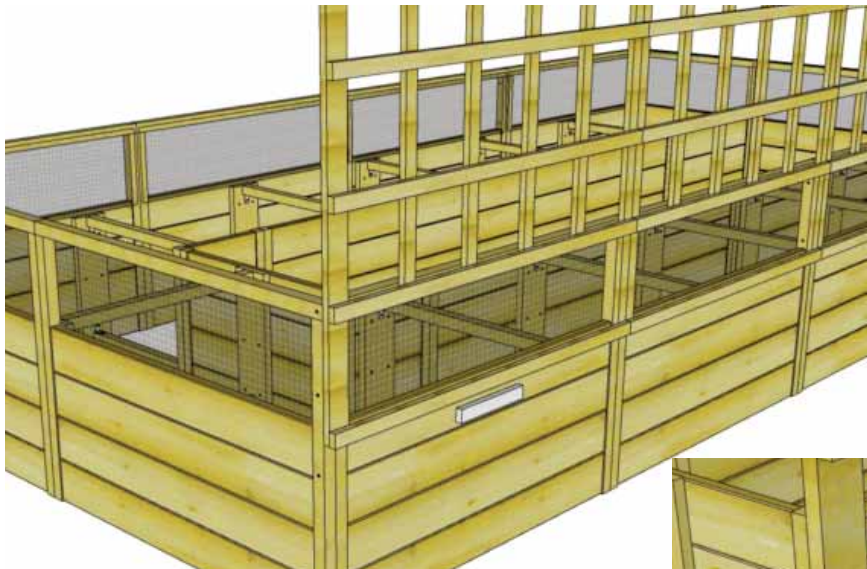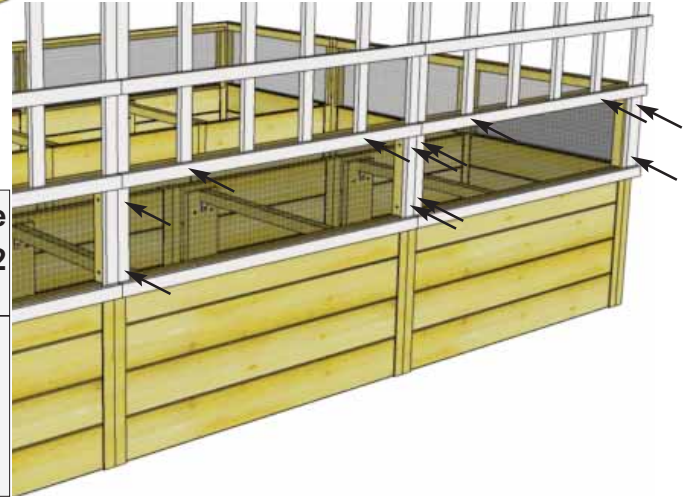


**4.** Fit a **Horizontal Cleat** between the Lattice Panel and Garden Bed panel, centered just below the screen. Attach with **2 - 2 1/2" Screws**.

<u>Parts (Steps 4 - 5)</u>	
<b>L3 - Horizontal Cleats</b> (3/4" x 1 1/2" x 10") x 4	
<u>Hardware (Steps 4 - 5)</u>	
<b>S1 - 2 1/2" Screws</b> x 8 total	

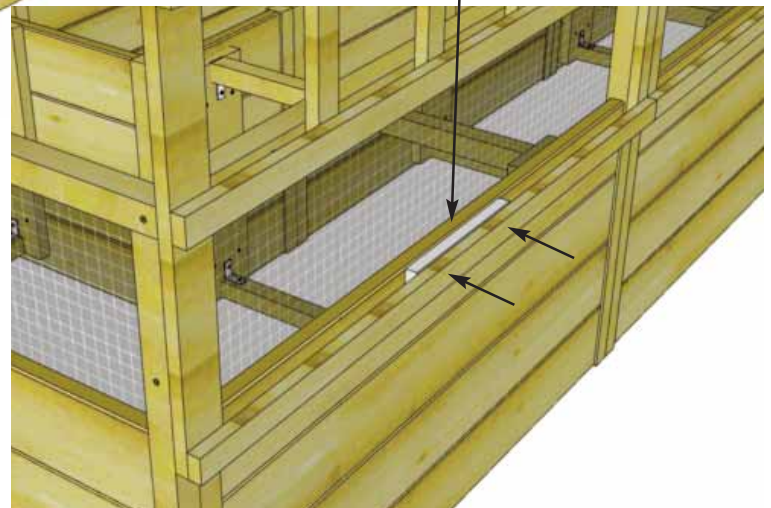



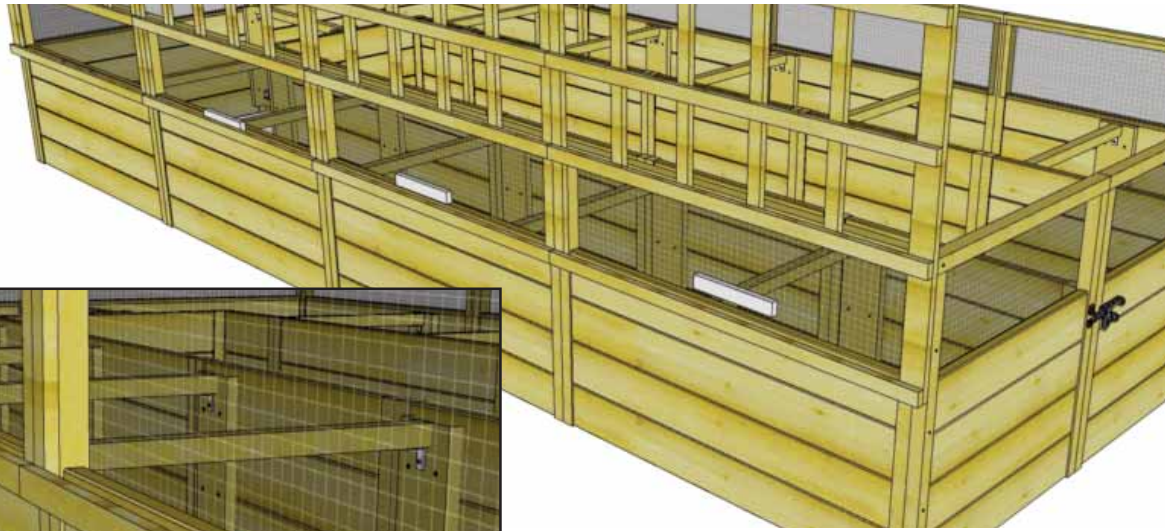

**5.** Position and attach remaining **Horizontal Cleats** as per **Step 4**.

**6.** Position **Vertical Braces** centered over seams between Lattice Panels. Attach with **5 - 2" Screws** per Brace, ensuring screws go through the intersecting sections of the Lattice crosshatch. Stagger screws side-to-side on Brace so Lattice Panels are secured together.




Parts

**L4 - Vertical Braces**

(3/4" x 3 1/2" x 47") x 3


Hardware

**S3 - 2" Screws** x 15 total

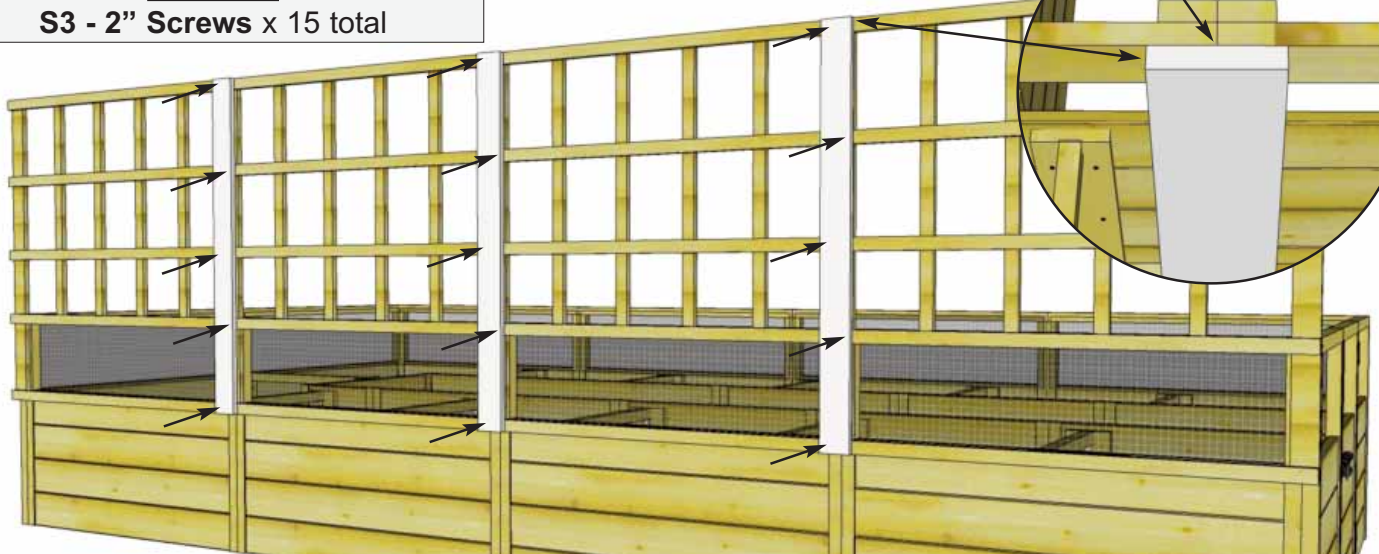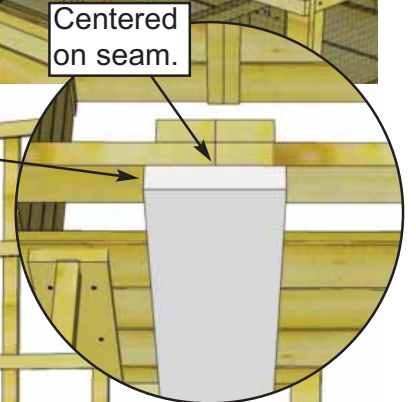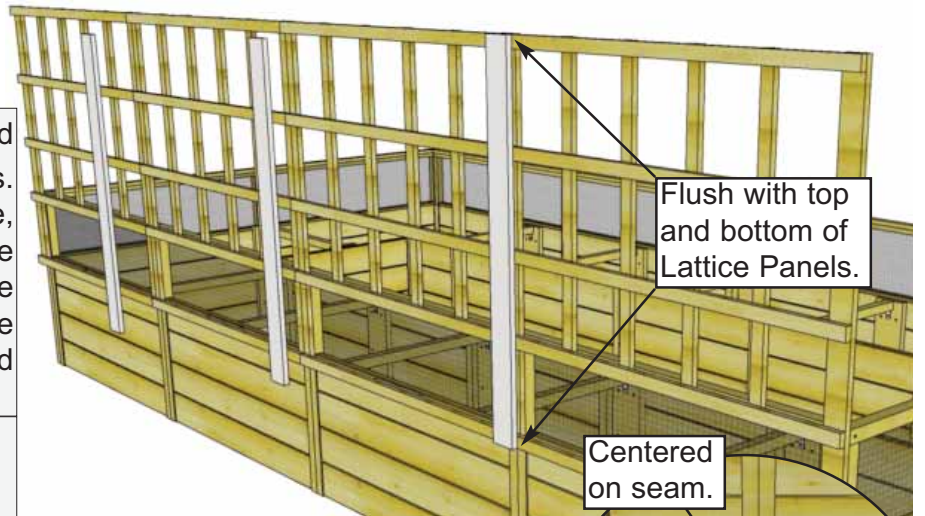



**Congratulations on assembling your 16ft Lattice Option for your Garden In A Box!**

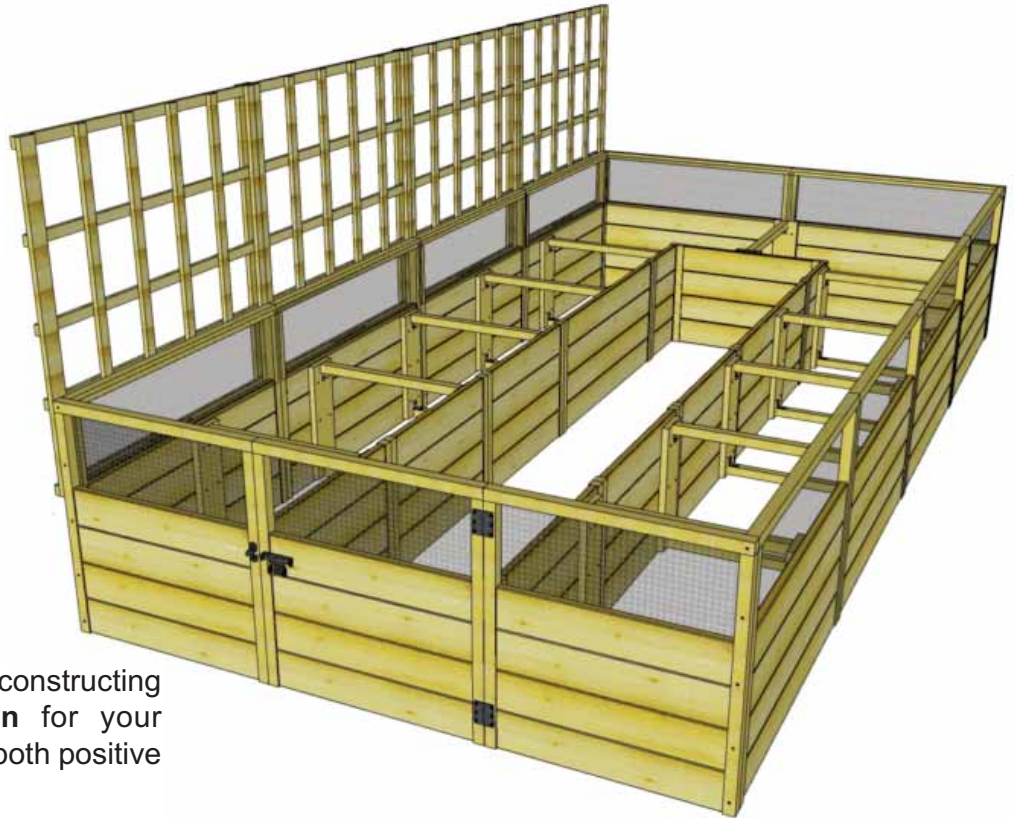

We hope your experience constructing your **16ft Lattice Option** for your Garden In A Box has been both positive and rewarding.

We value your feedback and would like to hear back from you on how well we are doing in the following areas:

- 1. Customer Service**
- 2. On Time Shipping**
- 3. Motor Freight Delivery**
- 4. Quality of Materials**
- 5. Assembly Manual**
- 6. Overall Satisfaction.**



The materials contained in this Assembly Manual may be downloaded or copied provided that ALL copies retain the copyright and any other proprietary notices contained on the materials. No material may be modified, edited or taken out of context such that its use creates a false or misleading statement or impression as to the positions, statements or actions.

Please call, write or email us at:

**Outdoor Living Today**

Canadian Address  
9393 287th Street  
Maple Ridge, British Columbia  
Canada V2W 1L1

United States Address  
P.O. Box 96  
Sumas, Washington  
USA 98295